

Typ 0 601 921 / ...

Stand Issue 90-07

A = Montage/Demontagestellung
 assembly/disassembly position
 position de montage/démontage
 position de montage/desmontaje

