

# Typ 0 601 921 / ...

Stand Issue 90-07

A = Montage/Demontagestellung  
 assembly/disassembly position  
 position de montage/démontage  
 position de montage/desmontaje

